

BABY LOCK SEWING ACCESSORIES

Quilting Foot - 1/4"

(BLQ2-QFQ)

Instructions


You can sew an exact 1/4" seam when piecing or creating perfect 1/4" or 1/8" topstitching. This foot also features raised markings along the sides of the foot for easy and flawless pivoting.



INSTRUCTIONS:


Removing the presser foot

Raise the presser foot (a).

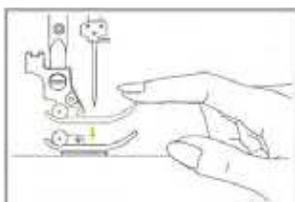


Attaching the presser foot

Lower the presser foot holder (b) until the notch (c) is directly above the pin (d). Lower the presser foot holder (b) and the presser foot (e) will engage automatically.

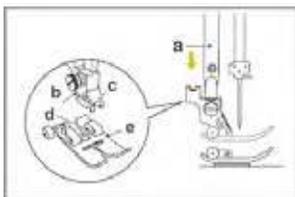

The Precision Dual-Feed Quilting System (PDQ) feeds the fabric from the top and bottom simultaneously to ensure matching of the fabric layers, used for quilting layers of fabric and batting, and when matching checked, striped or plaid fabrics.

To Activate and Deactivate the Precision Dual-Feed Quilting System (PDQ)

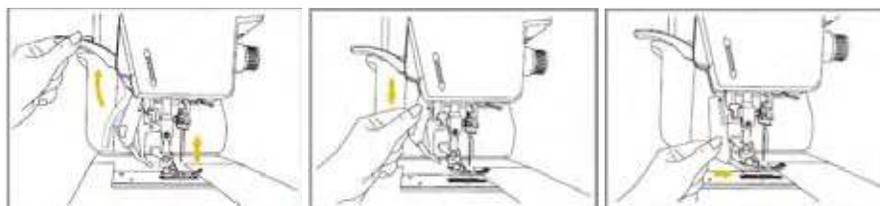


To activate the PDQ system, raise the presser foot. Lower the PDQ mechanism slowly and swing the PDQ mechanism forward under the back of the presser foot until it is engaged and stays in the system. To deactivate the PDQ system, raise the presser foot, pull down on the mechanism and swing it to the rear then raise the PDQ up.



FOR THE LOVE OF SEWING


1. Remove the presser foot.
2. Attach the 1/4" Quilting Foot and engage PDQ.
3. Select stitch.
4. Place the fabric under the foot.
5. Sew a 1/4" seam allowance. Red lines mark 1/4" and 1/8" pivot points in front of and behind the needle.

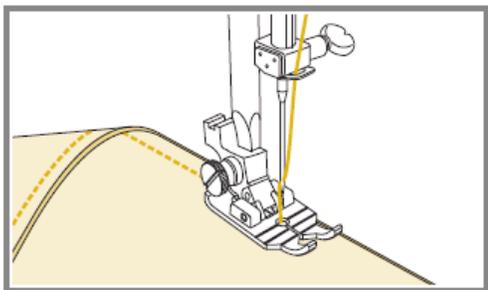

6. Sew with edge of fabric at the edge of the 1/4" quilting foot "RE". To pivot 1/4" from end of fabric; when fabric edge reaches the first red mark on foot stop sewing with needle in the down position.

NOTE: Group 3-C pattern 02, is 1/4 inch from the right edge of "RE" foot and pattern 04, is 1/4 inch from the left edge of "RA" foot.

Hand Quilting Stitch

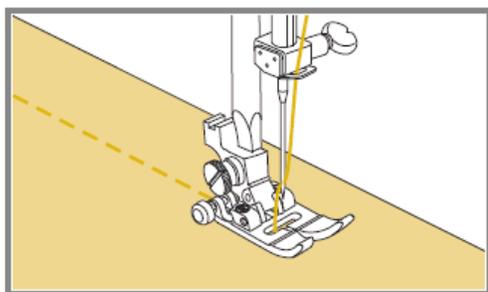

7. You can duplicate the look of a hand quilted stitch by using monofilament thread in the needle, 50 to 60 weight cotton thread in the bobbin, and increasing the needle tension.
8. The needle tension will need to be determined by the thickness of your batting.



FOR THE LOVE OF SEWING

800-422-2952

www.babylock.com