

BABY LOCK

SEWING ACCESSORIES

Open Toe Free-Motion Quilting Foot

(BLQ2-FMO)

Instructions




The free-motion open toe quilting foot is used for free-motion quilting with zigzag or decorative stitches or for free-motion quilting of straight lines on fabric with an uneven thickness.



INSTRUCTIONS:

1. Drop the feed dogs to set the machine for free-motion sewing.
2. Remove the presser foot holder.
3. Attach the open toe free-motion quilting foot by positioning the pin of the quilting foot above the needle clamp screw.
4. Hold the quilting foot in place with your right hand and tighten the presser foot holder screw using the screwdriver.
5. Securely tighten the screw with the screwdriver included with your machine.
6. Select a straight or zigzag stitch. Recommended width setting 3.5 -5.0mm.
7. Use both hands to hold the fabric taut, and then move the fabric at a consistent pace in order to sew uniform stitches approximately 2.0-2.5 mm (1/16 - 3/32 inch) in length.

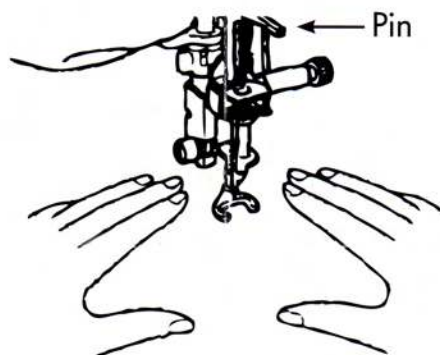

FOR THE LOVE OF SEWING